

Lane5000: How to softboot / reboot the Lane5000

Summary:

How to softboot / reboot the Lane5000

Solution:

To reboot the Lane5000, press and hold the Yellow (<) Button and # button simultaneously. This is the preferred method over unplugging the device while it is powered on.

Online URL: <https://counterpoint.knowledgebase.co/article.php?id=1307>