

How to adjust the brightness display on an iSC250

Summary:

How do I change the brightness on the Ingenico iSC250?

Solution:

- Hold **Clear** and **<minus>** until the device reboots.
- During startup, on the gray Retail Base App info screen select: **2, 6, 3, 4**, then **<Enter>**
- Then **<+>** to get the menu
- Select **Telium Manager**
- **Initialization**
- **Hardware**
- **Display**
- **Back Light**, move the slider to adjust to desired brightness.

Online URL: <https://counterpoint.knowledgebase.co/article.php?id=870>