

How to soft boot an Ingenico

Article Number: 79 | Rating: Unrated | Last Updated: Wed, Aug 13, 2014 at 11:14 AM

Summary: How to soft boot an Ingenico. How to reboot the ingenico without disconnecting the power, which can blow the encryption on the device and require service or replacement on the device.

Solution: I6650: Hold down the Number **One**, **Cancel**, and **Enter** buttons at the same time. ISC250: Hold down **Clear** and **Minus sign** at the same time.

Posted - Fri, Jun 20, 2014 at 4:02 PM. This article has been viewed 4303 times.

Online URL: <https://counterpoint.knowledgebase.co/article-79.html>