

## How to adjust the brightness display on an iSC250

Article Number: 870 | Rating: Unrated | Last Updated: Tue, Nov 24, 2015 at 9:00 AM

**Summary:** How do I change the brightness on the Ingenico iSC250? **Solution:** Hold **Clear** and **<minus>** until the device reboots. During startup, on the gray Retail Base App info screen select: **2, 6, 3, 4**, then **<Enter>** Then **<+>** to get the menu Select **Telium Manager Initialization Hardware Display Back Light**, move the slider to adjust to desired brightness.

Posted - Mon, Nov 23, 2015 at 1:03 PM. This article has been viewed 7528 times.

Online URL: <https://counterpoint.knowledgebase.co/article-870.html>